IP Link® Device Interface Communication Sheet

This document provides additional assistance with wiring your Extron IP Link enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific Extron IP Link enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Audio Processor
Manufacturer: Audac
Firmware Version: N/A
Model(s): M1

Version History:

Driver Version	Date	IP Link Compiler	GC Version	Notes
1	4/12/2012	1.5.1	3.3.1	Initial version.

Driver Notes:

Control Commands & States:

Input Ch.1 – 7	0 to 62 in steps of 1	
Mute All Channels	On	Off
Mute Input 1 – 7	On	Off
Mute Output 1 – 4	On	Off
Output Ch.1 – 4	0 to 62 in steps of 1	
Recall	Execute	
Save	Execute	
Zone 1 – 4	1 – 7	
Zone 1 – 4 Take	Tie	Break

Status Available:

Connection Status	Connected	Disconnected
Input Ch.1 – 7	0 to 62 in steps of 1	
Mute Input 1 – 7	On	Off
Mute Output 1 – 4	On	Off

MLC60 Series Supported Commands:

Mute All Channels	On	Off
Mute Input 1 – 7	On	Off
Mute Output 1 – 4	On	Off

Cable and Adapter Requirements:

F / F RS232 Straight Serial Cable

Notes for the Device:

Make sure line 4 (DTR) is not connected.

Serial communication:

Port Type:	RS-232	**Parity:**	None
Baud Rate:	9600	**Stop Bits:**	1
Data Bits:	8	**Flow Control:**	None

Pin Assignments Diagram:

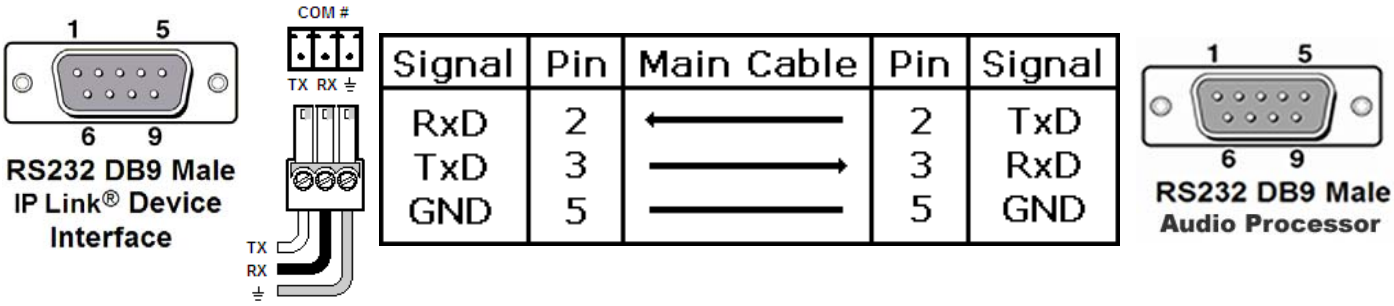

Note: Captive screw connector may also be used as a serial connection.

General Notes: